

## Universal air conditioner remote control

### Product Introduction

Q-988E type universal air conditioner remote control can remotely control most brands and models of air conditioners with digital automatic code searching function with low power consumption, complete function, far sending distance, easy setting, simple operation, original appearance, comfortable handle and convenient use, it applies big LCD display with clear settings, built-in clock and timing ON/OFF function also make operation more convenient.

### Panel Description:

1. Temperature Display
2. Fan Display
3. Temperature "+" key
4. Blowing Direction Control Key
5. Fan Key
6. Fast Heat Key
7. Timing ON Key
8. SET
9. Run Mode Display
10. Signal Sending Display
11. Blowing Direction Display
12. Model Code
13. Temperature "-" key
14. Mode Key
15. Power Key
16. Automatic Blowing Direction Control Key
17. Fast Cool Key
18. Clock Function Key
19. Timing OFF Key
20. Enter Key

### Fast Cool/Heat Key

- Press "Fast Cool" key to automatically set the machine as refrigerating mode, 21°C, middle wind, automatic blowing direction;
- Press "Fast Heat" key to automatically set the machine as heating mode, 27°C, middle wind, automatic blowing direction.

### No need to set:


Once the battery is loaded, the remote control can control the mainstream brands on the market: Gree (YB0F2), Midea, Toshiba, Chunlan, Haier, Mitsubishi Heavy Industries 388, Hualing and other brands.

### Restore factory settings

press the button "set" and "air volume" simultaneously for three seconds to restore the factory settings.  
Note: when the battery is loaded, the combination code does not have timing function. To use the timing function, please control according to the setting method described in the instruction book, which is corresponding to the model.

### Battery Installation:

1. Remove the battery cover of the remote control, install two new 7# batteries;
2. Install the battery cover. The time will appear in the left corner of LCD display.

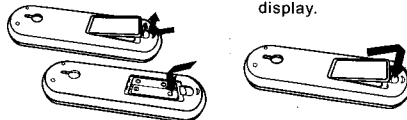


★ Since the remote control has the function of automatic memory after power failure, insure that the remote control can work normally after replacing batteries, the interval of replacing batteries should exceed 30 seconds.

### Setting of Remote Control


Three methods (Method A/B/C) are provided to set this remote control, any one of which can be used in operation.

#### A. Digital automatic search type

1. Manually plug-in the air conditioner, aim the remote control at the receiving window of the air conditioner.

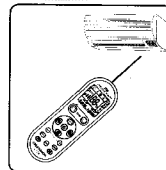

2. Hold on "SET" key (for about 3 seconds), release after the code flashes in the LCD, then press "Power" key (for about 6 seconds), release it after the code flashes again, the system will enter into automatic search state, and the code will increase "1" every two seconds, pay attention to the state of your air conditioner, keep searching till the air conditioner automatically turn on/off, press "Enter" key to finish setting.

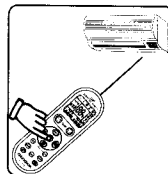


Note: When turning on/off the air conditioner, the code displayed in the remote control is the corresponding code for the air conditioner.

#### B. Manually input code

1. Manually plug-in the air conditioner, find the type of the air conditioner in the "Code Table", and find the first code, for example: Haier


Brand	Code
Haier	1-19

Code is flashing

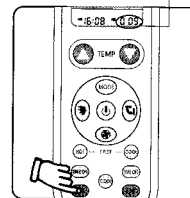


2. Hold on "SET" key (for about 3 seconds), release when the code flashes in the LCD, press temperature "▲" key till the desired code displays and flashes in the LCD.

Code stops flashing

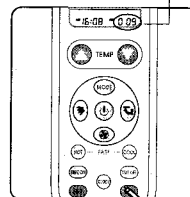

3. Press "Enter" key, the code will stop flashing,



4. Test if the keys on the remote control is effective, if yes, finish setting, if not, please repeat step 2-4.

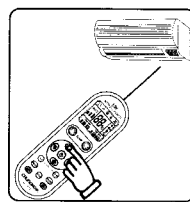

## C. Manually search for code

1. Manually plug-in the air conditioner, aim the remote control at the receiving window of the air conditioner.

2. Hold on "SET" key (for about 3 seconds), release after the code flashes in the LCD, then repeat to press temperature "▲", pay attention to the state of your air conditioner, keep searching till the air conditioner automatically turn on/off, press "Enter" key to finish setting.

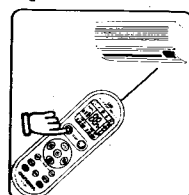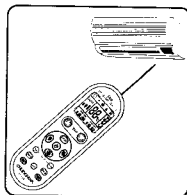

### Set Time Function

Press "Clock" key to enter into clock setting state, clock flashes, adjust current time by pressing "Temperature +" or "Temperature -", press "Clock" key again to exit.

### Timing ON/OFF Function

#### Timing ON Function

Press "Timing ON" key to increase one hour for starting the machine at setting time, it means to cancel Timing ON if it exceeds 24 hours. The time displayed for starting the machine means that the air conditioner automatically turns on at the setting time. The displayed ON time will count down, after setting, the remote control shall aim at the receiving window of the air conditioner.

#### Timing OFF Function

Press "Timing Off" key to increase one hour for turning off the machine at setting time, it means to cancel Timing OFF if it exceeds 24 hours. The time displayed for closing the machine means that the air conditioner automatically turns off at the setting time. The displayed OFF time will count down.

Note: Timing function applies HOUR system, which shall be 24 hours for max, the timing on and timing off time shall not be set at the same.

- This remote control is effective if the air conditioner receiver works normally.
- This remote control can not increase the functions of your air conditioner, if blowing direction function is not available for your air conditioner, then the blowing direction key of this remote control will be invalid.
- Do not use old and new batteries or batteries of different models at the same time.
- If this remote control is intended to be not in use for a long time, please remove the batteries.
- It may possibly caused internal program disorder if this remote control is not operated correctly, in case of that, please take out the battery, and install the batteries 35 minutes later, then the remote control may recover normal.

Warm tips



## Applicable brand and code list

Brand	Code	Brand	Code	Brand	Code	Brand	Code	Brand	Code
ACSOM	980	DAKE	861	HYUNDAI	780-789	PEREG	998	TADAIR	501,508,509,532
ADC	861	DAOTIAN	821-824	INYCIN	475-483	PIUSHANGXINHUABAO	290		501,508,509,532,630,969,978,979,991
AIDELONG	293-295	DELONGHI	900	JIANGNAN	359	PILOT	902	TADIRAN	
AITE	296-299	DIY	044,090,092,095	JIALE	358	PUYI	862		862
AKIRA	796-797	DUNAN	336	JMSTAR	360	QIXING	393	TAIYA	
AMCOR	501,508,509,532,973,978,979	DONGXIA	334-335	JINBEIJING	361-362	RAYBO	371-383	TCL	120-133
AMICO	982	DONGXINBAO	260-268	JINDA	491-492	RHOSS	903	TEAC	850-859
ALPIN	989-991,998	ELCO	982	JINSONG	363-365	RICAI	394	TECO	831-834
AUCMA	210-229,933	ELECTER	981-986	JOHNSO	282	RUIJIANG	395-397	TIANJINGKONGTIAO	424
AUX	180-199	ELECTROLUX	471-474,250,308	KANGLI	368-370	ROWA	383-385	TIANYUAN	425-428
AOKI	301-302	FEDDERS	878	KELONG	110-119	SAJJO	848	TOBO	250-269
AOLI	300	FEIEDRICH	879	KLIMATAIR	797-800	SAMSUNG	610-629	TONGLI	429-430
APTAN	862	FEIGE	829-830	KONKA	366-367	SANYO NEC	500-550,860,943,946	TOYO	825-828
BAIXUE	299	FEILU	240-249	KRIS	804-805	SANZUAN	190	TOSHIBA	630-639
BEIJINGJINGDIAN	304	FERROLIT	901	KT02_D001	283	SAPORO	861	TRANE	812-816
BIG-THUMB	311	FIRST	864	KT02_D002	284	SAST	450-452	UNI-AIR	368-369
BLUE STAR	887	FRESTECH	270-279,944-945	KTY001	285	SENSOR	860	UTTLEDUCK	454-456
BOERKA	630	FUJITSU	700-719	KTY002	286	SERENE	499	VIDEOCON	884
BOERKA	305-306	Funiki	992	KTY003	287	SHAMEI	400	WANBAO	431-433
BOSHI	310	GALANZ	134-149,936-940	KTY004	288	SHANGLI	403-409	WANGZI	861
BOSHIGAO	308-309	GEER	342-343	KTY005	289	SHANYE	862	WEILI	434-443,553-576
BORLER	307	GLEE	280	LG	600-609	SHANXING	401-402		
CAIXING	311	GOLDSTAR	303	LIANGYU	780	SHARP	720-739	WEITELI	444
CARRIER	690-699,890-899	GREE	000,020-039	LIKEAIR	386-387	SHENBAO	410-411	WHIRLPOOL	770-774
CHANGFENG	190	GUANGDA	345-346	LITTLESWAN	453	SHENGFENG	412	WUFENG	445-446
CHANGFU	835-838	GUOQIAO	344	LONGHE	861	SHENGFENGFELLU	413	XINGHE	462-463
CHANGLING	312-323	HAIER	001-019	LOREN-SEBO	801-803	SHINCO	200-209	XINLE	457-460
CHANGHONG	059-079,934,947	HELTON	863	MCQUAY	790-795	SHINING	415	XILENG	448-449
CHENGYUAN	324	HAMILTON	095	MIDEA	040-058	SHUANGLU	416-418,948	XINLING	461
CHIGO	080-099	HICON	391-392	MEILING	388-391	SIGMA	447	XIONGDI	862
CHUANGHUA	325-328	HISENSE	230-239	MINGXING,BOYIN	290	SOGO	291	YAIR	467-471,044
CHUANYAN	861	HITACHI	640-659	MITSUBISHI	551-599	SONGLINXIA	862	YAOMA	470,977
COLROLLA	861	HONGYI	347	MITSUKA	904	SONGXING	419	YIDONG	499
CHUNLAN	170-179	HUABAO	100-109	NATIONAL/Panasonic	660-689	SOVA	292	YORK	775-779
CONSUL	993	HUAGAO	348	NIKKO	810-811	SOVA	420	YUTU	484-490
CONROWA	337-341	HUAKE	349-350	NISO	398-399	SOWA	862-863	ZHONGYI	493-494
CORONA	760-769	HUAMEI	351-352	NORCA	497	SOYEA	421-422	ZUODAN	495
CROWN	861	HUANGHE	353	NORCA	994	SPEED	987	YUETU	881-882,949
DAEWOO	332-333	HUALING	150-169,045	OLYMPUS	995-996	SRTC	423		496,498,821-828,839-849,865-877,905-976,999
DAIKIN	740-759	HUAWEI	281	OPAL	997	STARIGHT-AIRCON	880	OTHER	
DAJINXING	329-330	HUIFENG	354-356,357,360	PANDA	464-466	SUNBURG	817-820		

\* This company reserves the right to interpretation of the User's Manual. Design and technical parameters may vary without notice.